

Driver Card

- 1 Main Menu
- 2 Malfunction Indicator
- 3 Transfer Mode
- 4 Connection to Truck ECM
- 5 Rule Set USA/Canada
- 6 Current Driver
- 7 Team Switch
- 8 Current Status / Status Switch
- 9 HOS Clock



Make sure:

- > Your phone or tablet is connected to a power source
- > Your name and truck number are correct
- > Your phone or tablet is mounted in a local with a good GPS signal

TrackEnsure (ELD) Certification



The TrackEnsure ELD is compliant with Federal Motor Carrier Safety Regulation 49 CFR § 395.15 and 49 CFR § 395.20 et seq. regarding AOBDRDs and ELDs.



The TrackEnsure ELD is compliant with Section 83 of the Commercial Vehicle Drivers Hours of Service Regulations regarding the use of electronic recording devices.

Inspection Instructions


Driver - Start here:



1 Select DOT Inspect

2 Give an inspector your phone or tablet.

Inspector - Start here:

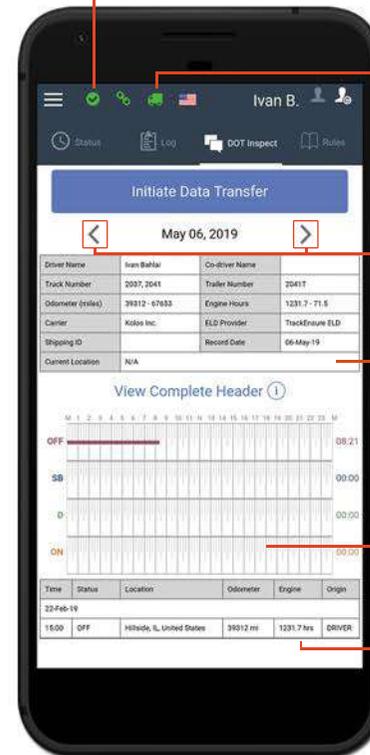

This icon indicates whether there are any malfunctions or data inconsistencies.

Truck is connected and the system is in ELD mode.

Use left and right arrows on the top of the screen to select a data to inspect.

The Log Form contains required information about the driver, carrier, and vehicles.

The Log Graph details the driver's duty status changes for the day.

The table shows you the details of each duty status period.



Need More Help?

Do not hesitate to contact our support team at 1 416 551 6300 or mail us info@trackensure.com

For future assistance and information on roadside inspection please visit <https://trackensure.com/elog-instructions>